


## VPS.D110.000 Instruction card

1. Place the VPFlowScope display on the VPFlowScope. Make sure the o-ring is in the lower groove position to ensure proper sealing.

2. Tighten the screw gently. Do not use excessive torque, as this will damage the VPFlowScope display and void warranty.

3. Use the protection cap for extra protection.

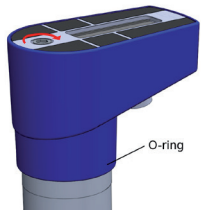

rev-12-2016

[www.vpinstruments.com](http://www.vpinstruments.com)

